

RP250

Modeling Guitar Processor



DigTech®

User's Manual



The symbols shown above are internationally accepted symbols that warn of potential hazards with electrical products. The lightning flash with arrowpoint in an equilateral triangle means that there are dangerous voltages present within the unit. The exclamation point in an equilateral triangle indicates that it is necessary for the user to refer to the owner's manual.

These symbols warn that there are no user serviceable parts inside the unit. Do not open the unit. Do not attempt to service the unit yourself. Refer all servicing to qualified personnel. Opening the chassis for any reason will void the manufacturer's warranty. Do not get the unit wet. If liquid is spilled on the unit, shut it off immediately and take it to a dealer for service. Disconnect the unit during storms to prevent damage.

ELECTROMAGNETIC COMPATIBILITY

This unit conforms to the Product Specifications noted on the **Declaration of Conformity**. Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Operation of this unit within significant electromagnetic fields should be avoided.

- use only shielded interconnecting cables.

WARNING FOR YOUR PROTECTION READ THESE INSTRUCTIONS:

KEEP THESE INSTRUCTIONS

FOLLOW ALL WARNINGS

FOLLOW ALL INSTRUCTIONS

THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING LIQUID AND NO OBJECT FILLED WITH LIQUID, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CLEAN ONLY WITH A DRY CLOTH.

DO NOT BLOCK ANY OF THE VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS.

DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.

ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.

UNPLUG THIS APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

MAINS DISCONNECT: The plug shall remain readily operable. For rack-mount or installation where plug is not accessible, an all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated into the electrical installation of the rack or building.

DECLARATION OF CONFORMITY

Manufacturer's Name: DigiTech
Manufacturer's Address: 8760 S. Sandy Parkway
Sandy, Utah 84070, USA

declares that the product:

Product name: RP250
Note: Product name may be suffixed by the letters EX, EU, JA, and UK.

Product option: all (requires Class II power adapter that conforms to the requirements of EN60065, EN60742, or equivalent.)

conforms to the following Product Specifications:

Safety: IEC 60065 (1998)

EMC: EN 55013 (2001 + A1)
EN 55020 (1998)

Supplementary Information:

The product herewith complies with the requirements of the Low Voltage Directive 72/23/EEC and the EMC Directive 89/336/EEC as amended by Directive 93/68/EEC.

Vice-President of Engineering-MI
8760 S. Sandy Parkway
Sandy, Utah 84070, USA
Date: August 15, 2006

European Contact: Your local DigiTech / Johnson Sales and Service Office or

Harman Music Group
8760 South Sandy Parkway
Sandy, Utah 84070 USA
Ph: (801) 568-8800
Fax: (801) 568-7583

Table of Contents

Section One - Introduction

Getting Acquainted.....	1
Included Items	1
About the RP250	2
Performance Mode.....	2
Bypass Mode	2
Tuner Mode.....	2
Tone Library Knob	4
Effects Library Knob.....	4
Master Level Knob.....	4
X-Edit™ Editor/Librarian.....	4
Presets	5
A Guided Tour of the RP250	6
Front Panel	6
The Rear Panel.....	10
Getting Started.....	12
Making Connections.....	12
Mono Operation - Amplifier	12
Stereo Operation.....	13
Applying Power	15

Section Two - Editing Functions

Editing/Creating Presets	16
Storing/Copying/Naming a Preset.....	17

Section Three - Models and Parameters

About the Models.....	19
Model Definitions	20
Pickup	20
Wah.....	20
Compressor	21
Distortion	21
Amplifier.....	23
Cabinet Model.....	25
EQ.....	26
Noise Gate.....	26
Chorus/FX.....	27
Chorus.....	27
Flanger	28
Phaser	28
Tremolo.....	29
Panner.....	29
VibroPan.....	30
Vibrato.....	30
Rotary Speaker	30
YaYa™	31
Auto Ya™	31
Envelope Filter	32
Step Filter.....	32
Detune.....	32
Pitch Shift.....	32
Intelligent Pitch Shifting (IPS).....	33
DigiTech Whammy™	34
Delay	35
Reverb	36

Section Four - Other Functions

Drum Machine.....	37
Aux Input.....	38
Expression Pedal	38
Factory Reset.....	39
Expression Pedal Calibration	39

Section Five - Appendix

Specifications.....	42
Expression Pedal - Assignable Parameters	44
Tone Library.....	46
Effects Library	47
Preset List	48

Warranty

We at **DigiTech®** are very proud of our products and back up each one we sell with the following warranty:

1. The warranty registration card must be mailed within ten days after purchase date to validate this warranty.
2. DigiTech warrants this product, when used solely within the U.S., to be free from defects in materials and workmanship under normal use and service.
3. DigiTech liability under this warranty is limited to repairing or replacing defective materials that show evidence of defect, provided the product is returned to DigiTech WITH RETURN AUTHORIZATION, where all parts and labor will be covered up to a period of one year. A Return Authorization number may be obtained from DigiTech by telephone. The company shall not be liable for any consequential damage as a result of the product's use in any circuit or assembly.
4. Proof-of-purchase is considered to be the burden of the consumer.
5. DigiTech reserves the right to make changes in design, or make additions to, or improvements upon this product without incurring any obligation to install the same on products previously manufactured.
6. The consumer forfeits the benefits of this warranty if the product's main assembly is opened and tampered with by anyone other than a certified DigiTech technician or, if the product is used with AC voltages outside of the range suggested by the manufacturer.
7. The foregoing is in lieu of all other warranties, expressed or implied, and DigiTech neither assumes nor authorizes any person to assume any obligation or liability in connection with the sale of this product. In no event shall DigiTech or its dealers be liable for special or consequential damages or from any delay in the performance of this warranty due to causes beyond their control.

NOTE: The information contained in this manual is subject to change at any time without notification. Some information contained in this manual may also be inaccurate due to undocumented changes in the product or operating system since this version of the manual was completed. The information contained in this version of the owner's manual supersedes all previous versions.



Section I - Introduction

Getting Acquainted

Congratulations on your purchase of the RP250. You now have an incredibly advanced modeling guitar processor that can keep up with your creative impulses and even increase them. Armed with DigiTech®'s patented AudioDNA2® custom audio DSP chip, the RP250 gives you a huge selection of tones and effects, right at your fingertips. When you easily dial up a tone or effect from the Tone Library or the Effects Library, you'll appreciate the accuracy in each model, and the dynamic interaction in each tone. Add USB support for computer recording and a built-in drum machine, and you have the RP250: the key to unlock your creative potential.

Included Items

Before you get started, please make sure that the following items have been included:

- **RP250**
- **PS0913B Power Supply**
- **Warranty Card**

The utmost care was taken while your RP250 was being manufactured. Everything should be included and in perfect working order. If anything is missing, contact the factory at once. Please help us become acquainted with you and your needs by completing your warranty card or registering online at www.digitech.com. It is your safeguard should a problem arise with your RP250.

Disclaimer: DigiTech, Lexicon, Whammy, YaYa, AutoYa, and Johnson Amplification are trademarks of Harman International Industries, Inc. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech or Harman International Industries, Inc. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

About the RP250

Performance Mode

When you first apply power to the RP250, it powers up in Performance mode. Performance mode provides access to all of the presets within the RP250 via the **Up** and **Down Footswitches**.


Knob 1 selects a tone from the Tone Library, **Knob 2** selects an effect from the Effects Library, **Knob 3** adjusts the Effects Level, and **Knob 4** adjusts the Master Level (volume).

Bypass Mode

The RP250 presets can be bypassed via a true analog bypass circuit for a clean, unprocessed guitar signal. To bypass the RP250, press both **Footswitches** simultaneously. The Display reads *BYPASS* indicating the preset is bypassed. Press either **Footswitch** to exit Bypass and return the RP250 to the last preset used.

Tuner Mode

The Tuner in the RP250 allows you to quickly tune or check the tuning on your guitar. Enter Tuner mode by pressing and holding both **Footswitches** simultaneously. The Display briefly shows *TUNER* indicating that you are in Tuner mode. To begin tuning, play a note on your guitar (a harmonic at the 12th fret usually works best). The Display shows the note being played. The Matrix LEDs indicate whether you are sharp or flat. The top 5 red LEDs indicate the note is sharp and should be tuned down. The bottom 5 red LEDs indicate the note is flat and should be tuned up. The center green LED indicates the note is in tune. The output is muted in Tuner mode. The Expression Pedal controls the guitar volume while tuning. Exit tuner mode by pressing either **Footswitch**.

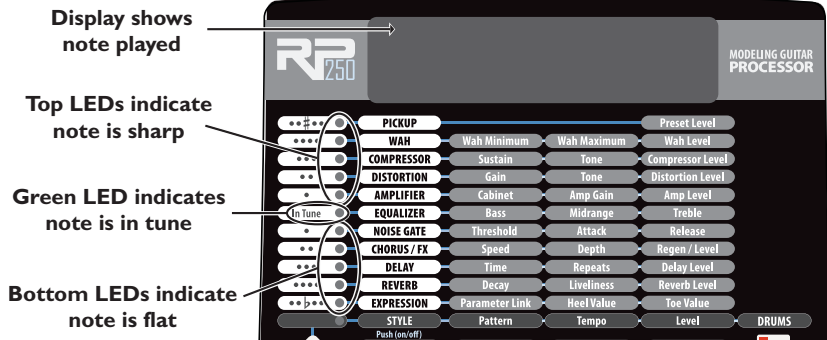

In Tuner mode, you can change your tuning reference. The default factory setting is A=440 Hz (displayed as $A=440$). Rotating **Knob 1** selects alternate dropped tunings. Alternate tunings are A = Ab, A = G, and A = Gb. The display window briefly flashes the current tuning reference.

Tone Library Knob

In Performance mode, this knob selects a variety of genre-based amp tone defaults ranging from Blues to Metal to Country. Behind the scenes, the Compressor, Distortion, Amp/Cabinet model, and EQ are configured to create a specified tone with a single click of this knob. You can further refine the sound by editing the preset (see *Editing/Creating Presets* on page 16). Changing between different Tone Library defaults does not change the Chorus/FX, Delay or Reverb, letting you experiment with different amp styles quickly in the context of the current effect chain.

Effects Library Knob

In Performance mode, this knob selects a variety of post-amplifier model effect chains (Chorus, Chorus + Delay, Delay + Reverb, etc.). You can further refine the sound by editing the preset (see *Editing/Creating Presets* on page 16). Changing between different Effects Library defaults does not change the Compressor, Distortion, Amp/Cabinet model, and EQ settings, letting you experiment with different effect chains quickly in the context of the current amp tone.

Effects Level Knob

In Performance mode, this knob changes the relative level of the post-amp effects (Chorus/FX, Delay, and Reverb). This can be thought of as an effects mix control, where turning this knob clockwise increases the level of these effects and turning it counter-clockwise decreases the level of these effects.

Master Level Knob

This knob controls the overall output volume of all of the RP250's presets.


X-Edit™ Editor/Librarian

You can edit your RP250 with your computer, using the X-Edit™ Editor/Librarian. Download X-Edit™, USB drivers, and documentation from www.digitech.com. Open the readme file for detailed instructions about installing and using this software.

Presets

Presets are named and numbered locations of programmed sounds which reside in the RP250. Presets are recalled with the Footswitches. The active effects in each preset are indicated by lighted LEDs in the Effect Matrix. The RP250 comes with 60 User presets (1-60) and 60 Factory presets (61-120). The User presets are locations where your creations may be stored. The Factory presets do not allow you to store any changes to them. From the factory, the 60 User presets are exact duplicates of the 60 Factory presets. This allows you to create your own presets without losing the sounds that came with the RP250.

The Tone Library knob, Effects Library knob, and Effects Level knob make it easy to quickly load preset tones, effects, and effects chains.

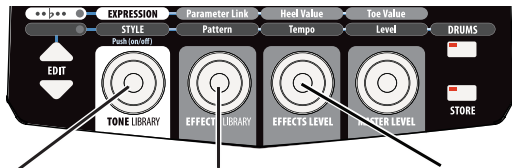


1. Select a tone with the Tone Library knob
2. Select an effect or effects chain with the Effects Library knob
3. Adjust the effects level with the Effects Level knob

To learn about storing changes to presets, see page 17.

A Guided Tour of the RP250

The Front Panel

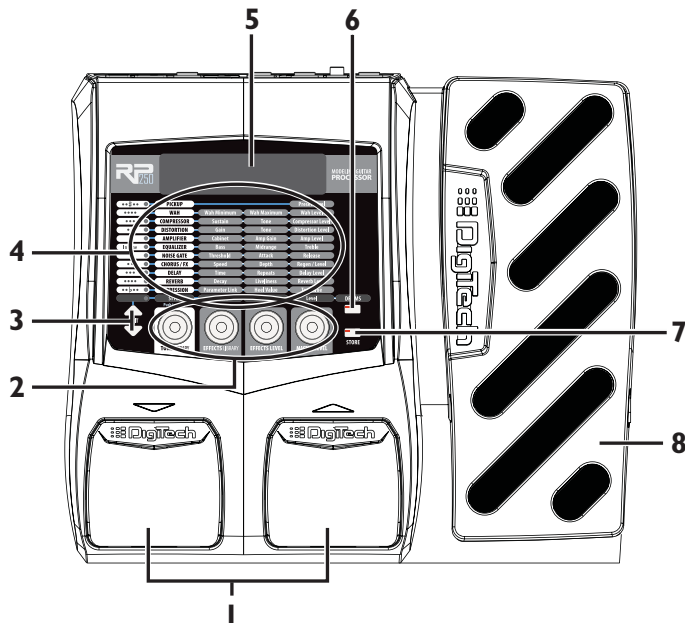

1. Footswitches

These two Footswitches are used to select presets, access the Tuner, or bypass the RP250. The Footswitch on the right will select the next preset up, and the Footswitch on the left will select the next preset down. Pressing both Footswitches together will bypass the currently selected preset. Pressing and holding both Footswitches will access the Tuner. Press either Footswitch to exit Bypass or Tuner mode.

2. Knobs 1-4

These four knobs perform various functions, depending on which mode is currently active and what (if anything) is being edited. The functions are listed below:

Tone Library Knob (Knob 1)

1. In Performance mode, this knob selects from a library of preset amp tones. (See page 46 for a list of preset amp tones.)
2. When editing a preset, this knob changes the Amp or Effect model for the selected row.
3. When editing an Effect row, press this knob to turn on or bypass the effect.
4. When the Drums row is selected, this knob selects the first pattern of each drum pattern style (Rock, Blues, Jazz, etc.).

Effects Library Knob (Knob 2)

1. In Performance mode, this knob selects from a library of preset effect configurations. (See page 47 for a list of preset effect configurations.)
2. When editing a preset, this knob modifies the parameter listed in the column directly above it for the selected Effect row.
3. When the Drums row is selected, this knob selects the different drum patterns available.
4. When the Expression row is selected, this knob selects which parameter is assigned to the Expression Pedal.

Effects Level Knob (Knob 3)

1. In Performance mode, this knob adjusts the overall level of post amp model effects (Chorus/Mod, Delay, and Reverb).
2. When editing a preset, this knob modifies the parameter listed in the column directly above it for the selected Effect row.
3. When the Drums row is selected, this knob adjusts the playback Tempo of the drum machine.
4. When the Expression row is selected, this knob selects the heel value for the Expression Pedal.

Master Volume Knob (Knob 4)

1. In Performance mode, this knob adjusts the output level of the RP250.
2. When editing a preset, this knob modifies the parameter listed in the column directly above it for the selected Effect row.
3. When the Drums row is selected, this knob adjusts the drum machine playback level.
4. When the Expression row is selected, this knob sets the toe value for the Expression Pedal.

3. Edit buttons

These buttons navigate up and down the matrix, selecting the row of parameters which the knobs will edit. Press one of these buttons to step through the Effect rows, and return to the preset name display. See page 16 for more information about editing presets.

4. Matrix

The matrix provides information regarding the current preset and parameter edit functions. In Performance mode, the LEDs running down the left side of the Matrix provide a visual indication of which effects are in use for the currently selected preset. While editing a preset, the LEDs indicate the Effect row currently selected for editing. In Tuner mode, the LEDs indicate whether the note played is sharp, flat, or in tune.

5. Display

The Display provides information for different functions depending on the mode that has been selected. In Performance mode, the Display will show the currently selected preset name and number. In Edit mode, the Display will show the name and value of the parameter being adjusted. In Tuner mode, the Display will show the note played.

6. Drums

The Drums button is used to turn on and off the RP250's built-in drum machine. When the Drums button is turned on, the Drums LED lights and the selected drum pattern plays continuously. Select the Drums row using the **Edit** buttons and use **Knobs 1-4** to change the style, pattern, tempo, and level of the drum machine. See page 37 for more information about the drum machine and a list of patterns.


7. Store

The Store button is used to save your custom edits to the user presets. See page 17 for more information about storing presets.

8. Expression Pedal

The Expression Pedal provides real-time control of the RP250's Volume, Wah, or the assigned effect parameter. Almost every parameter is available for Expression Pedal control. The Expression Pedal is equipped with a V-switch that activates or deactivates the Wah feature when you apply extra pressure to the toe. See page 20 for more information about Wah models; see page 38-39 to learn about adjusting V-switch sensitivity and calibrating the Expression Pedal; refer to pages 44-45 for a list of parameters you can link to the Expression Pedal.

Rear Panel

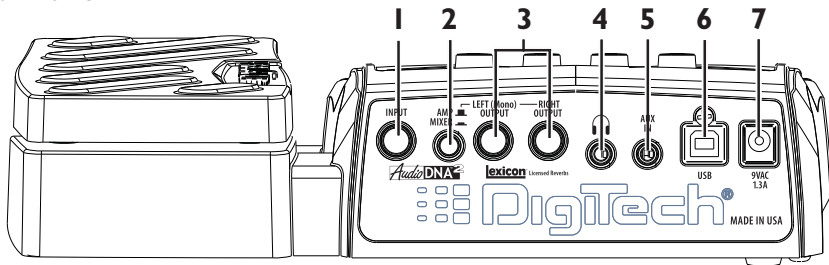

1. Input

Connect your instrument to this high-impedance TS input.

2. Amp / Mixer

This button optimizes the RP250's outputs for use when plugged into a guitar amp or a mixer/recording device. When set to Mixer ("In" position), speaker compensation is turned on and the outputs are optimized for connecting to a mixer, recording device or headphones. When set to Amp ("Out" position), the outputs are optimized for running directly in to the input of a guitar amp.

3. Left (Mono) and Right Outputs

Connect the Left (Mono) output to the input of a single amplifier (or mixer input) for mono operation. Connect the Left and Right outputs to the inputs of 2 amplifiers (or 2 mixer channels) for stereo operation.

4. **Headphones**

Connect a pair of stereo headphones to this 1/8" jack. For proper frequency response, the Amp/Mixer switch should be set to Mixer ("in" position) when using headphones.

Note: The Headphones output can have either a mono or stereo signal, depending on what 1/4" outputs are connected. If neither (or both) 1/4" outputs are connected, the Headphones output will be in stereo. If a cable is connected to the Left (Mono) 1/4" output only, the Headphones output will be in mono.

5. **Aux In**

Connect the headphone output of an MP3 or CD player using a stereo 1/8" cable to this 1/8" stereo TRS jack for rehearsing with your favorite pre-recorded material. Adjust the output level of your playback device and the RP250's **Master Level** knob for the proper volume balance.

6. **USB Port**

The USB port is for connecting the RP250 to a computer and serves two purposes: (1) for use with the downloadable X-Edit™ Editor/Librarian software, and (2) for streaming audio to and from the computer. Audio streaming is limited to 2 channels up and 2 channels down from the computer at 44.1kHz, 16 bit and 24 bit. A utility panel in the Editor/Librarian controls the direct/playback mix with any recording software the RP250 is connected to.

Note: You can download the X-Edit Editor/Librarian software and USB drivers at www.digitech.com.

7. **Power Input**

Connect only the DigiTech® PS0913B power supply to this jack.

Getting Started


Making Connections

There are several different connection options available with the RP250. Before connecting the RP250, make sure that the power to your amplifier and the RP250 is turned off. There is no power switch on the RP250. To turn the RP250 on or off, connect or disconnect the included PS0913B power supply from the Power Input jack.

Mono Operation - Amplifier

Connect your guitar to the **Input** of the RP250. Connect a single mono instrument cable from the **Left (Mono) Output** of the RP250 to the instrument input or effect return on your amplifier. Set the **Amp/Mixer** switch to **Amp**.


NOTE: When using a guitar amp, it may be best to connect the guitar to the **Input** of the RP250 and the **Output** of the RP250 to the effect return of the amplifier.

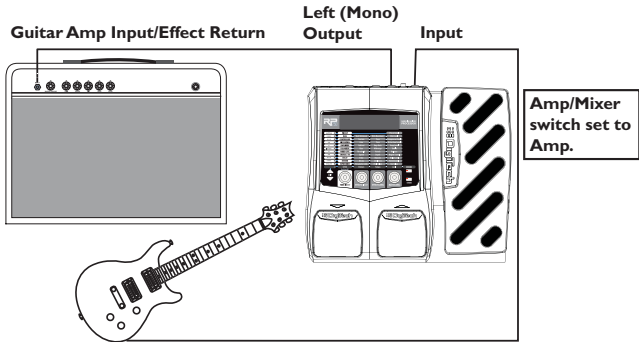

Stereo Operation


For stereo operation connect the guitar to the **Input** of the RP250. Connect one cable to the RP250's **Left (Mono)** output, and another cable to the RP250's **Right** output. Connect one cable to the input of one amplifier, channel of a mixer, or power amp. Connect the second cable to a second amplifier, second channel of a mixer, or power amp. If connecting to a mixing console, set the pan controls of the mixer channels hard left and right in order to retain stereo separation. If connecting to a mixer, set the **Amp/Mixer** switch to Mixer. If connecting to two amplifiers, set the **Amp/Mixer** switch to Amp.

Stereo Amp Setup

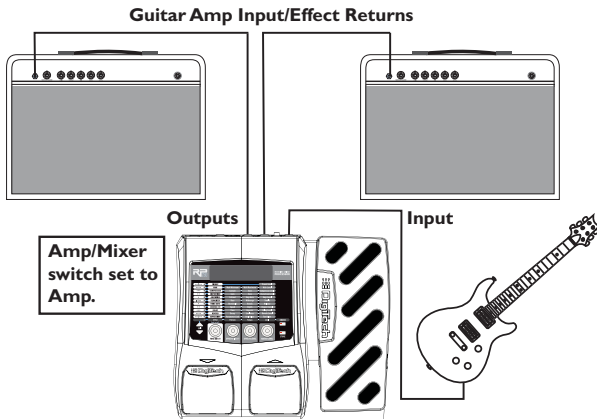


NOTE: When using a guitar amp, it may be best to connect the guitar to the Input of the RP250 and the Output of the RP250 to the effect return of the amplifier.

Stereo Mixer Setup

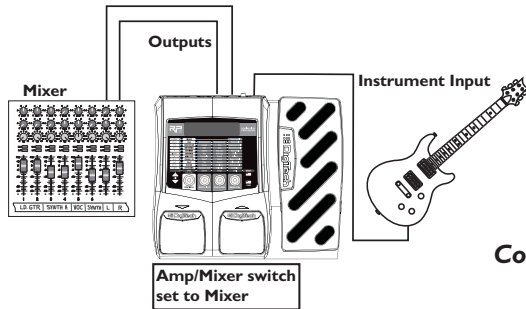


Computer Recording Setup

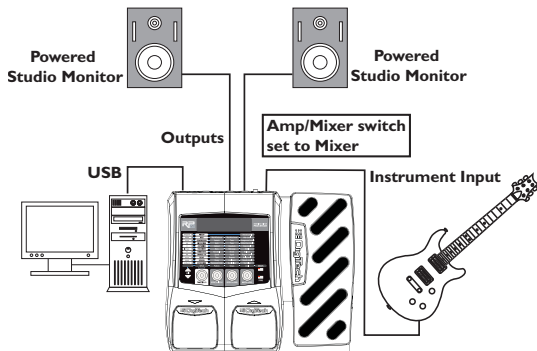

Applying Power

Before applying power to anything, set your amp(s) to a clean tone and set the tone controls to a flat EQ response (on most amps, this would be 0 or 5 on the tone controls). Then follow the steps listed below.

1. Turn the amp volume all the way down.
2. Connect the plug of the PS0913B power supply to the power jack on the rear panel of the RP250.
3. Connect the other end of the PS0913B power supply to an AC outlet. Turn the RP250's **Master Level** knob (**Knob 4**) down to "0".
4. Turn the power of your amplifier(s) to the on position and adjust the volume(s) to a normal playing level.
5. Gradually increase the RP250's **Master Level** knob to achieve the desired volume.

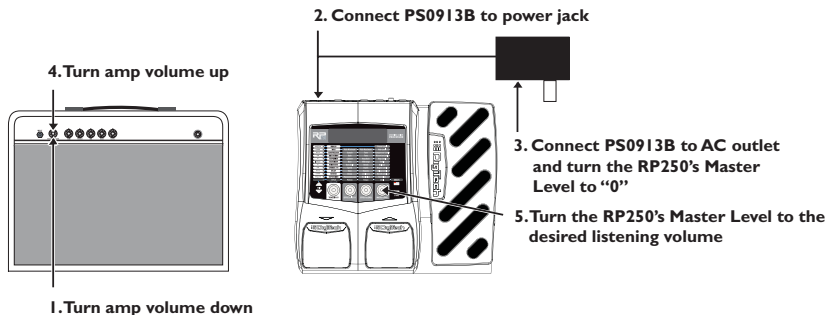

Section Two - Editing Functions

Editing/Creating Presets

The RP250 is designed to make preset editing and creation easy and intuitive. When creating your own sound, you must first start with an existing preset. Note that the preset you begin with doesn't have to be in the memory location you intend to have it reside, since you can store it to any User preset location during the store procedure.

The easiest way to start is by using the **Tone Library** and **Effects Library** knobs. The **Tone Library** knob will let you select from a variety of pre-programmed amp/distortion tones (see page 46) based on different musical styles. The **Effects Library** knob will then let you select from a palette of effects chains (see page 47), from simple delays to full multi-effect signals with modulation, delay and reverb. Use the **Effects Level Knob** to easily increase or decrease the Chorus/FX, Delay and Reverb levels if desired. Using these three controls should get you close to a sound you are after. From there you can then use the **Edit** buttons to navigate through the individual effects for some fine tune edits.

To edit and create a preset:


1. Use the **Footswitches** to select the preset you wish to edit.
2. If you find a preset close to what you want, you can begin editing the effect parameters by pressing the **Edit Up/Down** buttons and selecting the Effect row you want to edit.
3. If you are trying to find something different from the existing presets, begin by using the **Tone Library**, **Effects Library** and **Effects Level** knobs to get close to a sound you want.
4. Press the **Edit Up/Down** buttons to begin selecting the individual Effects rows to edit their parameters.
5. To bypass or enable an Effect row, press the **Tone Library** knob.
6. Use the **Knobs 2-4** to modify the effects' parameter settings.

Anytime a stored value within a preset is changed, the **Store** button LED lights up. This indicates that you need to store the changes. Changing presets, or turning the power off before storing any changes, erases any changes made and the RP250 will revert to the stored values for the preset.

Storing/Copying/Naming a Preset


Once the preset has been modified to your liking, you may store your settings to any of the 60 User preset locations (presets 1-60). The following steps outline the procedure for storing changes to a preset or copying a preset to a different location:

1. Press the **Store** button once. The **Store** button LED blinks and the first character in the Display flashes, indicating that you can now name your custom creation.
2. Use **Knob 1** to select the alpha-numeric character and **Knob 2** to select the next character location.

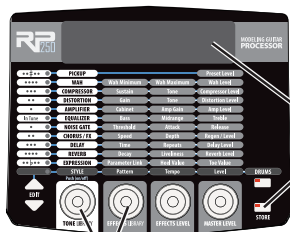

3. Once the desired name is shown in the display, press the **Store** button again to enter the second stage of the storing process. The Display begins to flash.

4. Select the User preset location where your new sound will reside using the **Up** and **Down Footswitches**. The display alternates between showing the preset name and User preset number about to be overwritten.

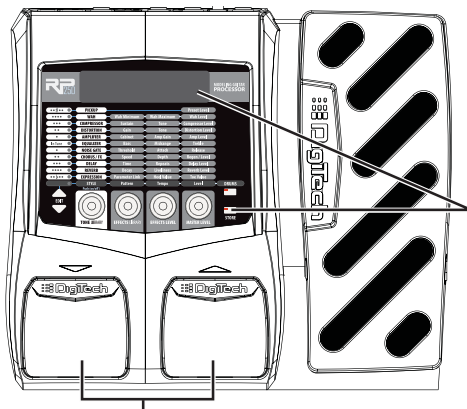

3. Press **Store** again;
Preset number flashes

4. Select destination
with **Footswitches**


5. Press the **Store** button again to save the changes.

The procedure for copying one preset to another preset location is the same. Use the **Footswitches** to select the preset that you want to copy, then follow steps 1-4 for storing a preset as described above. Press either **Edit** button at any time to abort the Store procedure.

Section Three - Models and Parameters

About the Models

The RP250 can be thought of as several different “virtual” amplifiers and individual, high-tech stompboxes in a single programmable package. With stompboxes, the order in which they are connected affects the overall sound. The RP250 has placed the Amp and Effect models in an order for optimum results. The following diagram shows the order in which they are connected.

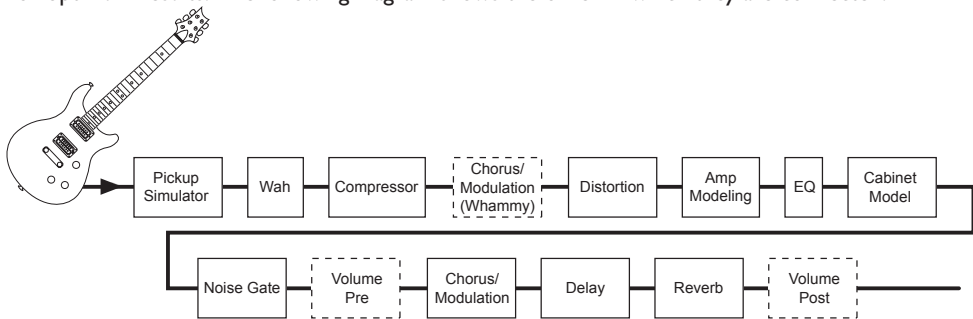

Model Definitions

Each Amp and Effect model within the RP250 can be programmed to suit your personal taste and application. Understanding how these components alter the sound, and how each parameter alters the effect, will help you achieve the sound you are looking for. The following overview of the RP250's effects outlines what each effect and parameter does.

Pickup

The **Pickup Simulator** provides the thick tone of a humbucker pickup to a guitar with single coil pickups, or the bright, edgy sound of a single coil pickup to a guitar with a humbucker. This gives you the best of both worlds without having to change guitars during a performance.

Pickup Model - Knob 1 selects the Pickup model to be simulated. Values include: *SC > HB* (gives a single coil pickup the warm tone of a humbucker), and *HB > SC* (gives a humbucker the unique sound of a single coil). Press this knob to turn Pickup modeling on and off.

Preset Level - Knob 4 adjusts the preset's level.

Wah

Wah is an effect controlled by an Expression Pedal making the guitar sound as if it's saying "Wah."

Wah Model - Knob 1 selects the Wah model. Values include: *FULLRNG* (DigiTech® Full Range Wah sweeps the entire spectrum of audible frequencies), *CRYWAH* (Cry Wah is a traditional sounding Wah), and *CLYDE* (based on a Vox® Clyde McCoy™ Wah). Press this knob to turn Wah models on and off.

Wah Minimum - Knob 2 adjusts the Wah Pedal Minimum. Ranges from 0 (toe up) to 99 (toe down).

Wah Maximum - Knob 3 adjusts the Wah Pedal Maximum. Ranges from 0 (toe up) to 99 (toe down).

Wah Level - Knob 4 adjusts the Wah Level. Ranges from 0dB to +12dB.

Compressor

A **Compressor** is used to increase sustain, tighten up guitars, and prevent the signal from clipping the input of other effects. It sets a maximum boundary for the strength of a signal.

Comp Model - Knob 1 selects one of two Compressor models: *DIGCOMP* (DigiTech® Compressor) or *CSCOMP* (Based on a Boss® CS-2 Compressor/Sustainer). Press this knob to turn the selected Compressor models on and off.

Sustain - Knob 2 adjusts the amount of sustain. Ranges from 0 to 99.

Tone/Attack - Knob 3 adjusts the tone for the DigiTech Compressor, or attack for the Boss CS-2. Ranges from 0 to 99.

Compressor Level - Knob 4 adjusts the Level from the Compressor. Ranges from 0 to 99.

Attack (X-Edit™ only for DigiComp) - Knob 4 adjusts the amount of time the Compressor takes to respond to a signal that exceeds the threshold. Ranges from 0 to 99.

Distortion

The RP250 models the tones of 13 popular distortion stompboxes, each of which can be tweaked and modified, just like the real thing.

Distortion Model - Knob 1 selects one of 13 Distortion models. Press this knob to turn the selected Distortion model on and off.

SCREAM - Based on an Ibanez® TS-9
808 - Based on an Ibanez TS-808 Tube Screamer
ODDRIV - Based on a Guyatone® Overdrive OD-2
DOD250 - Based on a DOD® 250 Overdrive/Preamp
RODENT - Based on a Pro Co RAT™
MXDIST - Based on an MXR® Distortion +

DSDIST - Based on a Boss® DS-1™ Distortion
GRUNGE - DigiTech® Grunge
ZONE - Based on a Boss MT-2 Metal Zone®
DEATH - DigiTech Death Metal
GONKLT - Based on a DOD Gonkulator Ring Mod
FUZZ - Based on an Arbiter® Fuzz Face™
BIG PI - Based on an Electro-Harmonix® Big Muff Pi®

DigiTech and DOD are trademarks of Harman International Industries, Inc. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech or Harman International Industries, Inc. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

Knobs 2, 3, and 4 have the following functions for the various Distortion models:

Dist. Model	Knob 2 (Gain)	Knob 3 (Tone)	Knob 4 (Level)	P4 (X-Edit™ only)	P5 (X-Edit only)	P6 (X-Edit only)
SCREAM	Drive	Tone	Level	--	--	--
808	Overdrive	Tone	Level	--	--	--
ODDRIV	Drive	--	Level	--	--	--
DOD250	Gain	--	Level	--	--	--
RODENT	Distortion	Filter	Level	--	--	--

Dist. Model	Knob 2 (Gain)	Knob 3 (Tone)	Knob 4 (Level)	P4 (X-Edit™ only)	P5 (X-Edit only)	P6 (X-Edit only)
MXDIST	Distortion	--	Output	--	--	--
DSDIST	Gain	Tone	Level	--	--	--
GRUNGE	Grunge	Face	Loud	Butt	--	--
ZONE	Gain	Mid Level	Level	Low	Mid Freq	High
DEATH	Mid	Low	Level	High	--	--
GONKLT	Gunk (Dist Gain)	Smear (Ring Mod Level)	Suck (Dist Level)	Heave (Output Lvl)	--	--
FUZZ	Gain	--	Level	--	--	--
BIG PI	Gain	Tone	Level	--	--	--

Amplifier

Amp Modeling is a technology which applies the tone of several popular modern and vintage amps. Amp Modeling also includes an acoustic guitar simulation.

Amp Model - Knob 1 selects one of the classic, modern, and DigiTech custom Amp models. Press this knob to turn Amp and Cabinet modeling on and off. Note that when you select an Amp model, the default Cabinet model is automatically selected. You can, however, change the Cabinet model after selecting an Amp model.

<i>57DLUX</i> - Based on a '57 Fender® Tweed Deluxe	<i>TOPBST</i> - Based on a '63 Vox AC30 Top Boost
<i>57CHMP</i> - Based on a '57 Fender Tweed Champ®	<i>HIWTAG</i> - Based on a '69 Hiwatt® Custom 100
<i>59BMAN</i> - Based on a '59 Fender Tweed Bassman®	<i>DRI03</i>
<i>65TWIN</i> - Based on a '65 Fender Blackface Twin Reverb®	<i>MARK2C</i> - Based on an '81 Mesa Boogie® Mark II C
<i>65DLXR</i> - Based on a '65 Fender Blackface Deluxe Reverb®	<i>RECTFR</i> - Based on an '01 Mesa Boogie Dual Rectifier
<i>69PLEX</i> - Based on a '68 Marshall® 100 Watt Super Lead (plexi)	<i>MATCH</i> - Based on a '96 Matchless™ HC30
<i>77MSTR</i> - Based on a '77 Marshall Master Volume	<i>DIGSLD</i> - DigiTech® Solo
<i>800JCM</i> - Based on an '83 Marshall JCM800	<i>DIGMTL</i> - DigiTech Metal
<i>900JCM</i> - Based on a '93 Marshall JCM900	<i>DIGBRT</i> - DigiTech Bright
<i>VXAC15</i> - Based on a '62 Vox® AC15	<i>DIGCLN</i> - DigiTech Clean
	<i>DIGGAN</i> - DigiTech Gain
	<i>ACDRED</i> - Dreadnaught acoustic
	<i>DIRECT</i> - No amp model

DigiTech is a trademark of Harman International Industries, Inc. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech or Harman International Industries, Inc. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

Cabinet - Knob 2 selects the speaker Cabinet model.

CHMP18 - Based on a 1x8 '57 Fender® Tweed Champ®	GRN412 - Based on a 4x12 Marshall 1969 Slant w/ Celestion 25W Greenbacks
DLX112 - Based on a 1x12 '57 Fender Tweed Deluxe®	VTG412 - Based on a 4x12 Johnson® Straight w/ Celestion Vintage 30's
TWN212 - Based on a 2x12 '65 Fender Blackface Twin Reverb®	DIGSLD - 4x12 DigiTech® Solo
BRT212 - Based on a 2x12 '63 Vox® AC30 Top Boost w/ Jensen® Blue Backs	DIGBRT - 2x12 DigiTech Bright
BMN410 - Based on a 4x10 '59 Fender Tweed Bassman®	DIGMTL - 4x12 DigiTech Metal
CLS412 - Based on a 4x12 Marshall® 1969 Straight w/ Celestion® G12-T70	DIGRCK - 4x12 DigiTech Rock
	DIGALT - 4x12 DigiTech Alt Rock
	DIGVTG - 4x12 DigiTech Vintage
	DIRECT - No cabinet model

DigiTech and Johnson Amplification are trademarks of Harman International Industries, Inc. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech or Harman International Industries, Inc. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

Amp Gain - Knob 3 adjusts the Gain (distortion) for the selected Amp model (not available for Acoustic). The Gain parameter ranges from 0 to 99.

Amp Level - Knob 4 adjusts the Level (volume) of the selected Amp model. The Level parameter ranges from 0 to 99.

EQ

Equalization is an extremely useful tool used to further shape the tonal response of your guitar signal. The EQ in the RP250 is similar to the tone knobs on an amplifier. All EQ parameters range from -12 dB to +12 dB.

EQ Model - Knob 1 selects between 4 different EQ modes, each with different frequency centers for Mid and Treble. Pressing this knob turns the EQ on and off.

Bass - Knob 2 adjusts the amount of low end level (Bass).

Mid - Knob 3 adjusts the amount of midrange level.

Mid Freq (X-Edit™ only) - This parameter selects the frequency that the Mid parameter adjusts. Ranges from 300 Hz to 5000 Hz.

Treb - Knob 4 adjusts the amount of high end level (Treble).

Treb Freq (X-Edit only) - This parameter selects the frequency that the Treb parameter adjusts. Ranges from 500 Hz to 8000 Hz.

Noise Gate

A **Noise Gate** is designed to eliminate noise while you are not playing, or provide an auto volume swell effect.

Gate Model - Knob 1 selects between the DigiTech® noise gate or the volume swell effect. Values include: *GATE* (Selects the noise gate) and *SWELL* (Selects the volume swell effect.) Press this knob to turn the noise gate on and off.

Threshold/Swell Sensitivity - Knob 2 sets the signal strength (Threshold) required to open or close the Noise Gate, or the Swell Sensitivity for the Auto Swell. Both parameters range from  (opens easily/high sensitivity) to  (requiring strong signals to open/high sen-

sitivity).

Attack Time - Knob 3 sets the attack time. Ranges from 0 (shorter attack time) to 99 (longer attack time).

Release - Knob 4 sets the Release parameter. Ranges from 0 to 99.

Attenuation (X-Edit™ only) - Knob 5 sets the Attenuation parameter. Ranges from 0 to 99.

Chorus/FX

The Chorus/FX row in the RP250 is a multi-function module, allowing you to select Effect models such as Chorus, Flanger, Phaser, Tremolo, Panner, Vibrato, Rotary Speaker, YaYa™, AutoYa™, SynthTalk™, Envelope Filter (auto wah), Detune, Pitch Shift, and Whammy™ effects. When the Chorus/FX row is selected, **Knob 1** is used to choose the Effect model. Press this knob to turn these Effect models on and off. Only one of the effects in this row can be used at a time. After selecting the type of effect in this module, **Knobs 2-4** can then be used to adjust the individual parameters associated with the selected effect. The following list describes each Effect model and its parameters in more detail:

Chorus (CHORUS)

A Chorus adds a short delay to your signal. The delayed signal is modulated in and out of tune and then mixed back with the original signal to create a thicker sound. The RP250 includes the following Chorus Effect models: **CE CHS** (based on the classic Boss® CE-2 Chorus), **CHORUS** (DigiTech®'s Dual Chorus), and **MCHORS** (DigiTech's famous Multi Chorus®).

Speed - Knob 2 adjusts the rate (Speed) of the modulation. Ranges from 0 to 99.

Depth - Knob 3 adjusts the Depth of the modulation. Ranges from 0 to 99.

Level - Knob 4 controls the level of the effect (DigiTech Chorus models only). Ranges from 0 to 99.

Waveform (X-Edit™ only for DigiTech Chorus models) - Selects a waveform: *TRIANG*, *SINE*, or *SQUARE*.

Flanger (*FLANGER*)

A Flanger uses the same principle as a Chorus but uses a shorter delay time and adds regeneration (or repeats) to the modulating delay. This results in an exaggerated up and down sweeping motion to the effect. The RP250 includes the following Flanger Effect models: *FLANGER* (the DigiTech Flanger), and *MXFLGR* (based on an MXR® Flanger).

Knobs 2, 3, and 4 have the following functions for the Flanger models:

Flanger Model	Knob 2 (Speed)	Knob 3 (Depth)	Knob 4 (Regen)	P5 (X-Edit™ only)	P6 (X-Edit only)
<i>FLANGER</i>	Speed	Depth	Regen	Waveform	Level
<i>MXFLGR</i>	Speed	Width	Regen	Manual	--

Phaser (*PHASER*)

A phaser splits the incoming signal, and then changes the phasing of the signal. This signal is then taken in and out of phase and mixed back in with the original signal. As the phasing changes, different frequencies get canceled resulting in a warm sort of twisting sound.

Knobs 2, 3, and 4 have the following functions for the two Phaser models:

Speed - Knob 2 adjusts the rate (Speed) of the modulation. Ranges from 0 to 99.

Depth - Knob 3 adjusts the Depth of the modulation. Ranges from 0 to 99.

Regeneration - Knob 4 controls the regeneration of the effect. Ranges from 0 to 99.

Waveform (X-Edit™ only) - Selects a waveform: *TRIANG*, *SINE*, or *SQUARE*.

Level (X-Edit only) - Controls the level of the effect. Ranges from 0 to 99.

Tremolo (TREMLO)

A Tremolo effect modulates the volume of the signal at an even rate.

Speed - Knob 2 adjusts the rate (Speed) at which the volume modulates. Ranges from 0 to 99.

Depth - Knob 3 adjusts the intensity (Depth) of the modulating volume. Ranges from 0 to 99.

Waveform - Knob 4 selects a waveform: *TRIANG*, *SINE*, or *SQUARE*.

Panner (PANNER)

An Auto Panner modulates the sound from left to right at an even rate.

Speed - Knob 2 adjusts the rate (Speed) at which the signal pans from side to side. Ranges from 0 to 99.

Depth - Knob 3 adjusts the intensity (Depth) of the changing pan. Ranges from 0 to 99.

Waveform - Knob 4 selects a waveform: *TRIANG*, *SINE*, or *SQUARE*.

VibroPan (VIBPAN)

A vibrato is an effect that modulates the pitch of the incoming signal. This will take the whole signal slightly in and out of tune at a steady pace. The VibroPan also incorporates an automatic panner with the vibrato effect that creates a lush chorus-like sound.

Speed - Knob 2 adjusts how fast the signal is being modulated.

Depth - Knob 3 adjusts the amount of pitch change.

Vibrato/Pan- Knob 4 adjusts the amount of panning incorporated with the vibrato effect. When the “Level” control is at “0”, this effect is a standard vibrato. As the Level parameter is turned up, the phase difference of the vibrato signal sent to the two channels is changed until a full stereo image is obtained at “99”.

Waveform (X-Edit™ only) - Selects a waveform: TRIANG, SINE, or SQUARE.

Vibrato (VIBRAT)

A Vibrato effect modulates the pitch of the incoming signal at an even rate.

Speed - Knob 2 adjusts the rate (Speed) at which the pitch modulates. Ranges from 0 to 99.

Depth - Knob 3 adjusts the intensity (Depth) of the modulating pitch. Ranges from 0 to 99.

Rotary Speaker (ROTARY)

Rotary Speaker is an emulation of a device that included a spinning horn and woofer. The rotation of these two speakers produced an interesting combination of the sound panning from side to side. This produced a slight pitch change due to the speed of the sound coming towards, and then going away from the listener.

Speed- Knob 2 adjusts the rate (Speed) of the spinning speakers. Ranges from 0 to 99.

Intensity - Knob 3 controls the intensity of the effect. Ranges from 0 to 99.

Doppler - Knob 4 controls the Pitch Shift effect that is the ratio between the horn and the rotor positions. Ranges from 0 to 99.

Crossover (X-Edit™ only)- Selects the crossover frequency between the horn and rotor. Ranges from 0 (200 Hz) to 99 (1600 Hz).

YaYa™ (YAYY)

The YaYa is another effect exclusive to DigiTech® products. Like the AutoYa™, it combines the characteristics of a wah and a flanger together providing a unique talk box type of effect, but is controlled by the Expression Pedal.

Pedal - Knob 2 adjusts the Ya pedal position. Ranges from 0 to 99.

Intensity - Knob 3 adjusts the intensity of the YaYa effect. Ranges from 0 to 99.

Range - Knob 4 adjusts the throaty quality of the YaYa effect. Ranges from 0 to 49.

AutoYa™ (AUTOYA)

An AutoYa combines the characteristics of a Wah and a Flanger together creating an almost human vowel characteristic as if the guitar were saying “Yah.” The AutoYa™ automatically provides this animation to the sound at an even rate.

Speed - Knob 2 adjusts the speed of the AutoYa sweep. Ranges from 0 to 99.

Intensity - Knob 3 adjusts the intensity of the AutoYa effect. Ranges from 0 to 99.

Range - Knob 4 adjusts the throaty quality of the AutoYa effect. Ranges from 0 to 49.

Envelope Filter (ENVELOP)

The Envelope Filter is a dynamic Wah effect that alters your sound based upon how hard you play.

Sensitivity - Knob 2 adjusts the sensitivity or the input signal required to trigger the Wah effect. Ranges from 0 to 99.

Range - Knob 3 controls the range of the Envelope effect. Ranges from 0 to 99.

Step Filter (STEPFLT)

The Step Filter is like an automatic “random wah” with a square waveform.

Speed - Knob 2 adjusts the speed of the Wah effect. Ranges from 0 to 99.

Intensity - Knob 3 controls the intensity of the Wah effect. Ranges from 0 to 99.

Detune (DETUNE)

A Detuner makes a copy of your incoming signal, takes the copied signal slightly out of tune from the original, then mixes the two signals together. The result is a doubling type of effect as if two guitars were playing the same part together.

Shift Amount - Knob 2 adjusts the amount of pitch difference applied to the copied signal. Ranges from -24 to 24 cents.

Level - Knob 4 controls the mix of the detuned note. Ranges from 0 to 99.

Pitch Shift (PITCH)

A Pitch Shifter copies the incoming signal, then shifts the pitch of the copy to a different note. The shifted note is then mixed back with the original signal, sounding as if two guitars were playing different notes.

Shift Amount - Knob 2 selects the interval of the shifted pitch. Ranges from -2^4 (2 octaves below) to 2^4 (2 octaves above).

Mix - Knob 4 controls the mix level of the shifted pitch. Ranges from 0 to 99.

Intelligent Pitch Shifting (IPS)

Intelligent Pitch Shifting makes a copy of the incoming signal, and then changes the pitch of the copied note to a diatonically correct interval specified by the Amount parameter. An Intelligent Pitch Shifter sharpens or flattens the shifted pitch in order to keep the specified interval within the selected key and scale creating a true harmony.

Shift - Knob 2 selects the *amount* or *harmony interval* for the Intelligent Pitch Shifter. Interval choices include:

OCT DN (octave down)	2ND UP (a second above)
7TH DN (a seventh below)	3RD UP (a third above)
6TH DN (a sixth below)	4TH UP (a fourth above)
5TH DN (a fifth below)	5TH UP (a fifth above)
4TH DN (a fourth below)	6TH UP (a sixth above)
3RD DN (a third below)	7TH UP (a seventh above)
2ND DN (a second below)	OCT UP (an octave above)

Key - Knob 3 selects the musical key that the IPS uses. Key choices range from the Key of E (KEY E) through the Key of Eb (KEY Eb).

Scale - Knob 4 selects the scale the IPS will use. Scale choices include: Major (MAJOR), Minor (MINOR), Dorian (DORIAN), Mixolydian (MIXLYD), Lydian (LYDIAN), and Harmonic Minor (HMINOR).

Level (X-Edit™ only) - Adjusts the IPS Level (IPSLVL) of all the pitch-altering effects in this module. Ranges from 0 to 99.

DigiTech Whammy™ (WHAMMY)

The DigiTech Whammy™ is an effect that uses an Expression Pedal to bend the pitch of the incoming signal, or add a bendable harmony with the original signal. As the Pedal is moved, the note bends either up or down. When DigiTech Whammy is selected, it is automatically placed before the Amp modeling as shown in the block diagram on page 19.

Shift Amount - Knob 2 selects the interval and direction of the pitch bend. Choices are as follows:

Whammy™ (no Dry Signal)

OCT UP (1 octave above)
 2OCTUP (2 octaves above)
 2ND DN (a second below)
 RV2ND DN (a second below reversed pedal action)
 4TH DN (a fourth below)
 OCT DN (an octave below)
 2OCT DN (2 octaves below)
 DIVE BM (Dive Bomb)

Harmony Bends (Dry Signal Added)

M3>M3 (a minor third to a Major third)
 2ND M3 (a second above to a Major third above)
 3RD 4TH (a third above to a fourth above)
 4TH 5TH (a fourth above to a fifth above)
 5TH OCT (a fifth above to an octave above)
 HOCTUP (one octave above)
 HOCT DN (one octave down)
 OCTU>D (octave up/down)

Pedal Position - Knob 3 provides a manual control of the Whammy pedal position. Ranges from 0 to 99.

Mix - Knob 4 adjusts the Whammy mix. Ranges from 0 to 99.

Delay

Delay is an effect that will record a portion of the incoming signal, and then play it back a short time later. The recording can repeat just once or several times.

Delay Model - Knob 1 selects one of the 5 different Delay models. Values include: *ALGDL Y* (DigiTech® Analog Delay), *DIGDL Y* (DigiTech Digital Delay), *MODDL Y* (DigiTech Modulated Delay), *PNGDL Y* (DigiTech Pong Delay), and *TAPDL Y* (DigiTech Tape Delay). Press this knob to turn the Delay models on and off.

Knobs 2, 3, and 4 have the following functions for the various Delay models:

Delay Model	Knob 2 (Time)	Knob 3 (Repeats)	Knob 4 (Level)	P4 (X-Edit™ only)	P5 (X-Edit only)
<i>ALGDL Y</i>	Time	Repeats	Delay Level	--	--
<i>DIGDL Y</i>	Time	Repeats	Level	Duck Thresh	Duck Level
<i>MODDL Y</i>	Time	Repeats	Delay Level	Depth	--
<i>PNGDL Y</i>	Time	Repeats	Delay Level	Duck Thresh	Duck Level
<i>TAPDL Y</i>	Time	Repeats	Level	Wow	Flutter

Reverb

Using reverb in recorded program material gives the listener a sense that the material is being performed in an actual room or hall. It is this similarity to actual acoustic spaces that makes reverberation a useful tool in recorded music. The RP250 features genuine Lexicon® reverbs, whose rich, lush effects have been heard in countless songs, soundtracks, and live performances for decades.

Reverb Model

Knob 1 selects the Reverb model or acoustic space. Press this knob to turn the Reverb models on and off. The following models are available:

TWINRV - Based on a Fender®

Twin Reverb

LEXAMB - Lexicon® Ambience

LEXSTD - Lexicon Studio

LEXROM - Lexicon Room

LEXHAL - Lexicon Hall

EMTPLT - Based on an
EMT240 Plate

Reverb Model	Knob 2 (Decay)	Knob 3 (Liveliness)	Knob 4 (Reverb Level)	P4 (X-Edit™ only)
TWINRV	--	--	Reverb	--
LEXAMB	Decay	Liveliness	Reverb Level	Predelay
LEXSTD	Decay	Liveliness	Reverb Level	Predelay
LEXROM	Decay	Liveliness	Reverb Level	Predelay
LEXHAL	Decay	Liveliness	Reverb Level	Predelay
EMTPLT	Decay	Liveliness	Reverb Level	Predelay

Section Four - Other Functions

Drum Machine

The RP250 includes a built-in drum machine loaded with 60 useful patterns and 5 metronome settings that are easily accessible at the touch of a button (the **Drums** button, specifically). Pressing the **Drums** button will enable the drum machine and start playback of the selected drum pattern (except when in Store or Bypass mode). When the **Drums** row is selected (using the **Edit** buttons), **Knob 1** selects the drum Style, **Knob 2** adjusts the drum Pattern, **Knob 3** adjusts the Tempo of the drum pattern and **Knob 4** adjusts the Level of the drum pattern. Press the **Drums** button again to stop playback of the drum loop.

Drum Pattern List

BEATS (8th beat)	1-5	JAZZ	1-4
BEATS (16th beat)	6-8	HIPHP	1-4
ROCK	1-8	WORLD	1-4
HROCK	1-8	MET	4/4
METAL	1-8	MET	3/4
BLUES	1-8	MET	5/8
GROOV	1-4	MET	7/8
CNTRY	1-4	MET	MTRNOM

Aux Input

The Aux Input allows you to connect an MP3 or CD player to the RP250 and jam with your favorite artists. The signal from your MP3 or CD player is output through the left, right, and headphone outputs of the RP250. To use the Aux Input, connect the headphone output of your MP3 or CD player to the **Aux Input** on the rear panel of the RP250 using an 1/8" stereo cable, and press play on your MP3 or CD player. Use the playing device's volume control and the RP250's **Master Level** knob to balance the levels.

Expression Pedal

The Expression Pedal on the RP250 can be linked to control the RP250's Volume, Wah, Whammy™, YaYa™, or almost any of the RP250's other parameters in real time with your foot. When a parameter has been linked to the Expression Pedal, a minimum (heel) and maximum (toe) value can also be specified. Apply extra pressure to the toe of the Expression Pedal to activate the V-switch, and the Expression Pedal switches between the linked parameter and the Wah. The procedure for linking a parameter to the Expression Pedal is as follows:

1. Press either **Edit** button until the Expression row has been selected (indicated by the LED lighting on the Expression row). $E \times P$ appears in the display.
2. Rotate **Knob 2** until the desired parameter appears in the Display. See page 44 for a complete list of parameters that can be linked to the Expression Pedal.
3. Rotate **Knob 3** to select the minimum (heel) value the assigned parameter will reach with the Expression Pedal in the toe up position.
4. Rotate **Knob 4** to select the maximum (toe) value the assigned parameter will reach with the Expression Pedal in the toe down position.
5. Store your Expression Pedal assignment to your preset. See page 17 for more information on the storing procedure.

Factory Reset

This function resets the RP250 to its original factory settings. This procedure erases all custom User presets, and recalibrates the Expression Pedal.

ATTENTION: Performing this function will erase all user-programmed data. All such data will be lost forever! Be sure you want to erase the memory and start fresh before continuing with this procedure.

The procedure for performing a Factory Reset is as follows:

1. Press and hold the **Store** button while powering up the RP250.
2. When the display prompts you with *FACRST*, release the **Store** button, which is now flashing.
3. Press and hold the flashing **Store** button for 3 seconds until *RSTOR* appears in the display and release. The Expression Pedal calibration procedure now commences.

Expression Pedal Calibration

The Expression Pedal on the RP250 needs to be recalibrated for use after a factory reset has been performed. This calibration procedure is automatically entered after a factory reset procedure. (You can also initiate the calibration procedure by pressing and holding both **Footswitches** for approximately 5 seconds.) In the event the Pedal's calibration fails, or if the Pedal does not function properly, it can be re-calibrated using the Pedal Calibration procedure. This will not erase the User presets. The procedure for Calibrating the Expression Pedal is as follows:

1. Press and hold the **Up/Down Footswitches** until *PDLCAL* appears in the display (*BYPASS* and *TUNER* will be displayed before *PDLCAL* is accessed)
2. When the Display prompts you with *TOE DN*, rock the **Expression Pedal** forward (toe down)

- and press either **Footswitch**.
3. When the Display prompts you with *TOE UP*, rock the **Expression Pedal** back (toe up) and press either **Footswitch**.
 4. The Display now prompts you to calibrate the V-Switch sensitivity (*V SWXXX*), where *XXX* is the current V-Switch threshold. Rock the **Expression Pedal** forward and press firmly on the toe once to turn the V-Switch on (*WAK ON*), and again to turn the V-Switch off (*WAK OFF*).
 5. If the V-Switch is too sensitive, press the right **Up Footswitch** to raise the threshold (range is 0-200). Keep testing the V-Switch sensitivity and adjust the threshold until it only engages when you want it to (too sensitive a setting will lead to the V-Switch falsely triggering on or off when using the Expression Pedal).
 6. When the V-Switch sensitivity is set to your satisfaction, press both **Up/Down Footswitches** simultaneously to exit.

Note: If the Display shows *ERROR*, an error has occurred and steps 2 through 5 should be repeated.

Specifications

General Specifications

A/D/A Converter: 24-bit high performance audio

Sampling Frequency: 44.1 kHz

DSP Section: AudioDNA2™ DSP Processor

Simultaneous Effects: 11

Preset Memory: 60 User Presets (1-60) / 60 Factory Presets (61-120)

Drum Machine: 60 Patterns

Dimensions: 8.25" Length x 9.375" Width x 2.125" Height

Unit Weight: 3.3 lbs.

Analog Input Connections:

Guitar Input: 1/4" Unbalanced (TS)

Input Impedance: 500k Ohms

Aux Input: 1/8" Stereo (TRS)

Analog Output Connections:

Left/Right Outputs: 1/4 Impedance Unbalanced

Left/Right Output Impedance: 500 Ohms per side

Maximum Output: +10dBu

Headphones: 1/8" Stereo (TRS) – 13.6mW per channel @ 50 Ohms

Digital Connections:

Universal Serial Bus (USB): Type B, supports USB 1.1 Full Speed (12 Mbps Bandwidth USB 2.0 compatible)

RP250 USB Recording Specifications:

Sample Rate: 44.1 kHz

Bit depth: supports 16-bit or 24-bit (depends on setup in Recording Software)

Power Requirements:

US and Canada: 120 VAC, 60 Hz Adapter: PS0913B-120

Japan: 100 VAC, 50/60 Hz Adapter: PS0913B -100

Europe: 230 VAC, 50 Hz Adapter: PS0913B -230

UK: 240 VAC, 50 Hz Adapter: PS0913B -240

Minimum Windows® PC Computer System Requirements:

Windows® XP w/Service Pack 2 and .NET 2.0 installed

500 MHz processor speed (1.2 GHz recommended)

128 MB RAM (512MB recommended)

Minimum Mac Computer System Requirements:

OS 10.4 or higher

450 MHz CPU

256 MB RAM

Expression Pedal - Assignable Parameters



Volume / Wah Models

All Volume / Wah Models	Wah Minimum	Wah Maximum	Wah Level
Range	0-99	0-99	0dB - +12dB

Distortion Models

Ibanez® TS-9 Tube Screamer	SCREAM	Drive	Tone	Level			
Ibanez TS-808 Tube Screamer	808	Overdrive	Tone	Level			
Guyatone® Overdrive OD-2	ODDRIVE	Drive		Level			
DOD® 250 Overdrive/Preamp	OD250	Gain		Level			
Pro Co Rat™	ROBERT	Distortion	Filter	Level			
MXR® Distortion +	HYST	Distortion		Output			
Boss® DS-1™ Distortion	DS1	Gain	Tone	Level			
DigiTech® Grunge	GRUNGE	Grunge	High	Level			
Boss MT-2 Metal Zone	ZONE	Gain	Mid Level	Level	Low	Mid Freq	High
DigiTech Death Metal	DEATH	Mid	Low	Level	High		
DOD Gonkulator Ring Mod	GONKLT	Suck (Dist Level)	Smear (Ring Mod Level)	Heave	Gunk (Dist Gain)		
Arbiter® Fuzz Face™	FUZZ	Gain		Level			
Electro Harmonix® Big Muff® Pi	BIG PI	Gain	Tone	Level			
Range		0-99	0-99	0-99	0-99	0-99	

Comp / Limiter Models

DigiTech Compressor	DIGCOMP	Sustain	Tone	Level	Attack
Boss CS-2 Compressor/Sustainer	CSCOMP	Sustain	Attack	Level	
Range		0-99	0-99	0-99	0-99

EQ

3 band EQ	Bass	Midrange	Treble	Mid Freq	Presence	Treble Frequency
Range	-12 - +12	-12 - +12	-12 - +12	300Hz - 5000Hz	-12 - +12	500Hz - 8000Hz

Noise Gate / Auto Swell Models

DigiTech Noise Gate	GATE	Threshold	Attack Time	Release	Attenuation
DigiTech Auto Swell	SWELL	Swell Sensitivity	Attack Time	Release	Attenuation
Range		0-99	0-99	0-99	0-99

Chorus Models

Boss CE-2 Chorus	CE CHS	Speed	Depth			
DigiTech Dual Chorus	DCHORUS	Speed	Depth	Level	Waveform	
DigiTech Multi Chorus	MCHORUS	Speed	Depth	Level	Waveform	
Range		0-99	0-99	0-99	0-99	0-99

Flanger Models

DigiTech Flanger	FLANGER	Speed	Depth	Regen		Level
MXR Flanger	HIFLAGR	Speed	Width	Regen	Manual	
Range		0-99	0-99	0-99	0-99	0-99

Disclaimer: DigiTech, Lexicon, Whammy, YaYa, AutoYa, and Johnson Amplification are trademarks of Harman International Industries, Inc. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech or Harman International Industries, Inc. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

Phaser Models

DigiTech® Phaser	PHASER	Speed	Depth	Regen	Waveform	Level
Range		0-99	0-99	0-99	0-99	0-99

Pitch Models

DigiTech Whammy™	WHAMMY	Shift Amount	Pedal Position	Mix		
DigiTech Pitch Shift	PITCH	Shift Amount		Mix		
DigiTech Detune	DETUNE	Shift Amount		Level		
DigiTech IPS	IPS	Shift Amount	Key	Scale	Level	
Range		0-99	0-99	0-99	0-99	0-99

Vibrato / Rotary Models

DigiTech Vibrato	VIBRATO	Speed	Depth			
DigiTech Rotary	ROTARY	Speed	Intensity	Doppler	Crossover	
DigiTech Vibro/Pan	VIBPAN	Speed	Depth	Vibrato/Pan	Waveform	
Range		0-99	0-99	0-99	0-99	0-99

Tremolo Models

DigiTech Tremolo	TREMOLO	Speed	Depth	Waveform	
DigiTech Panner	PANNER	Speed	Depth	Waveform	
Range		0-99	0-99	Tri, Sine, Square	

Envelope / Special Models

DigiTech Envelope Filter	ENVELOP	Sensitivity	Range		
DigiTech Auto Ya™	AUTOYA	Speed	Intensity	Range	
DigiTech YaYa™	YAYA	Pedal	Intensity	Range	
DigiTech Step Filter	STPFLT	Speed	Intensity		
Range		0-99	0-99	0-99	

Delay Models

DigiTech Analog Delay	ALGDELAY	Time	Repeats	Delay Level		
DigiTech Digital Delay	DIGDELAY	Time	Repeats	Level	Duck Thresh	Duck Level
DigiTech Modulated Delay	MODDELAY	Time	Repeats	Delay Level	Depth	
DigiTech Pong Delay	PNGLAY	Time	Repeats	Delay Level	Duck Thresh	Duck Level
DigiTech Tape Delay	TAPDELAY	Time	Repeats	Level	Wow	Flutter
Range		10ms - 5sec	0-99 - Repeat Hold	0-99	0-99	0-99

Reverb Models

Fender® Twin Reverb®	TWINRV			Reverb		
Lexicon® Ambience	LEXAMB	Decay	Liveliness	Reverb Level	Pre Delay	
Lexicon Studio	LEXSTD	Decay	Liveliness	Reverb Level	Pre Delay	
Lexicon Room	LEXROM	Decay	Liveliness	Reverb Level	Pre Delay	
Lexicon Hall	LEXHAL	Decay	Liveliness	Reverb Level	Pre Delay	
EMT 240 Plate	EMTPLT	Decay	Liveliness	Reverb Level	Pre Delay	
Range		0-99	0-99	0-99	0-15	

Amp Models

All Amp Models			Amp Gain	Amp Level	
Range			0-99	0-99	

1	Overdrive	OVRDRV	16	Rock Wah	RCKWAH
2	Rock 1	ROCK 1	17	Chunky	CHUNKY
3	Rock 2	ROCK 2	18	Smooth	SMOOTH
4	Blues 1	BLUES 1	19	Heavy	HEAVY
5	Blues 2	BLUES 2	20	Clean 1	CLEAN1
6	Metal 1	METAL 1	21	Clean 2	CLEAN2
7	Metal 2	METAL2	22	British 1	BRTSH1
8	Country 1	ENTRY1	23	British 2	BRTSH2
9	Country 2	ENTRY2	24	American 1	AMRCN1
10	Warm Drive	WRMDRV	25	American 2	AMRCN2
11	Crunch	CRUNCH	26	Tube Drive	TUBDRV
12	Texas Tone	TEXTON	27	Distortion	DSTRTN
13	Rockabilly	RCKBLY	28	Scooped	SCOOPD
14	Solo 1	SOLO 1	29	Punchy	PUNCHY
15	Solo 2	SOLO 2	30	Bright Clean	BRICLN

1	Chorus	CHORUS	16	Chorus + Digital Delay	CHRDLY
2	Phaser	PHASER	17	Chorus + Delay + Reverb	CHDLRV
3	Flanger	FLANGER	18	Flanger + Analog Delay	FLGDLY
4	Pitch	PITCH	19	Phaser + Tape Delay	PHSDLY
5	Tremolo	TREMLO	20	Phaser + Mod Delay	PHMDLY
6	Rotary	ROTARY	21	Phaser + Plate Reverb	PHSRV B
7	Envelope Filter	ENVFLT	22	Digital Delay + Hall Reverb	DDLYRV
8	Digital Delay	DDDELAY	23	Analog Delay + Spring	DLYSPG
9	Analog Delay	ADDELAY	24	Chorus + Hall Reverb	CHRRV B
10	Pong Delay	PDELAY	25	Pong Delay + Hall Reverb	PNGHAL
11	Mod Delay	MDELAY	26	Tape Delay + Spring Reverb	TAPSPG
12	Tape Delay	TAPDLY	27	Tremolo + Tape Delay	TRMTAP
13	Hall Reverb	HALRV B	28	Pitch + Digital Delay	PCHDLY
14	Plate Reverb	PLTRV B	29	Mod Delay + Plate Reverb	MODPLT
15	Spring Reverb	SPGRV B	30	Rotary + Tape Delay	ROTDLY

Preset List

1 / 61	PLEXIDRV	PLXDRV	31 / 91	SYNTH SWELL	SWELL
2 / 62	COMP CLEAN	CMPCLN	32 / 92	ANALOG BOY	ALGBDY
3 / 63	SOLO DELAY	SOLDLY	33 / 93	BLUES DELAY	BLUDLY
4 / 64	BOOGIE MAN	BOOGMN	34 / 94	BIG ROOM	BIGROM
5 / 65	COOL CHORUS	COOLCH	35 / 95	DER YA	DER YR
6 / 66	RECTIFIED	RECTFD	36 / 96	FUZZ KING	FUZKNG
7 / 67	CLASSIC STACK	STACK	37 / 97	WAHS UP	WAHSUP
8 / 68	CLEAN COMBO	CLNCMB	38 / 98	CHIMEY	CHIMEY
9 / 69	PRIDE DELAY	PRIDE	39 / 99	BRIT 45	BRIT45
10 / 70	HILLBILLY	HILBLY	40 / 100	KILLER	KILLER
11 / 71	SO DELUXE	SODLUX	41 / 101	OCTIVED	OCTDVD
12 / 72	STEVIE RAY	STVRRY	42 / 102	FLANGTASTIC	FLNTAS
13 / 73	WHAMMY	WHAMMY	43 / 103	HENDRIX	HNDRIX
14 / 74	BASS MAN	BASMAN	44 / 104	BRIT COMBO	BRTCMB
15 / 75	DC/AC	DC/AC	45 / 105	HAIR DAY	HAIRDY
16 / 76	SANDMAN	SNDMAN	46 / 106	GITAR > BASS	GTRBAS
17 / 77	JUMP PANEL	JMPPNL	47 / 107	TAPED OUT	TAPOUT
18 / 78	TWIN REVERB	TWNRV	48 / 108	SUPER CLYDE	SUPCLY
19 / 79	METAL HEAD	MTLHED	49 / 109	BLUES DRIVE	BLUDRV
20 / 80	CHICKIN PICKIN	CHKPKN	50 / 110	CLEAN N BRIGHT	CLNBRT
21 / 81	CRUNCHY	CRNCHY	51 / 111	COWBOY	COWBOY
22 / 82	MR CLEAN	MRCLEN	52 / 112	STELLAR	STELLR
23 / 83	LA GREASER	GREASR	53 / 113	OLD SCHOOL	OLDSEL
24 / 84	BIG N BLUE	BIGBLU	54 / 114	PERTY	PERTY
25 / 85	SMOOTH JAZZ	SMTHJZ	55 / 115	STEPPIN	STEPPN
26 / 86	PUNK	PUNK	56 / 116	LED ZEP	LEDZEP
27 / 87	E DORIAN	EDORIN	57 / 117	MOSH MELLOW	MSHMLD
28 / 88	ACOUSTIC	ACoust	58 / 118	BIG STRUM	BGSTRM
29 / 89	RHAPSODY	RHPSDY	59 / 119	WOMAN	WOMAN
30 / 90	CLEAN FUNK	CLNFNK	60 / 120	SATCH	SATCH

DigiTech®
8760 South Sandy Parkway
Sandy, Utah 84070
PH (801) 566-8800
FAX (801) 566-7005
<http://www.digitech.com>

Printed 8/2006
RP250 User's Manual 18-0432-A

©2006 Harman International Industries, Incorporated, all rights reserved.

DigiTech and the RP250 are trademarks of the Harman Music Group. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with DigiTech. They are trademarks of other manufacturers and were used merely to identify products whose sounds were reviewed in the creation of this product.

 A Harman International Company